

HAPTIC CONSOLE



JH47-BT User Guide

기능 설명

A. 전원 ON(1.5초 이상 누름)/OFF(4초 이상 누름)

배터리 체크(1.5초 미만 누름)

B. 배터리 충전 커넥터(USB C type)

C. 이어폰 연결 커넥터

D. 배터리 상태표시 LED

E. 동작모드 전환스위치

(2초이내 연속 두번 누름 :

진동만, 진동 + 사운드 모드로 전환됨)


F. Type 설명

G. 상태표시 LED(Blue/Green/Red)

- Blue: 진동만

- Green: 진동 + 사운드

- Red: Power Off 또는 Low 배터리(1초 간격 깜빡임)

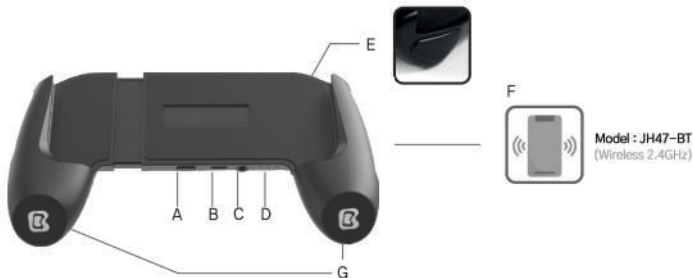

구성품

햅틱 콘솔 1ea / 햅틱 콘솔 케이스 1ea / 사용자 설명서 1ea / 충전 케이블 1ea

제품보증기간 및 주의사항

센스필의 모든 제품은 1년 무상 AS 정책을 시행하고 있습니다. 임의로 분해, 개조한 제품에 대해서는 무상 A/S를 지원하지 않습니다.

표시사항

제품명 : 햅틱콘솔 / 모델명 : 별도표기 / 재질 : PC/ABS 및 전자부품 / 판매사 : 센스필 / 인증번호 : 제품에 표기

사양(Specification)

전원 : DC 5V / 소비전류 : 동작 Max 400mA / 충전/동작 Max 600mA / 충전시간 : 약 6시간 (고속충전기 사용시) 완충 사용시간 : 약 4시간 사용

무게 : 160g (본체 기준) / 기능 : 햅틱 기능 ON / OFF 설정 버튼 / 내장형 배터리

제품 스마트폰 결합 및 분리 방법

제품 전원을 켜고 스마트폰 블루투스 디바이스 목록에서 BB JH47-BT를 선택한 후 연결을 실행합니다. 그 후 JH47-BT의 한쪽 면을 잡아 당겨 스마트폰을 장착합니다. JH47-BT는 스프링을 이용해 가로길이 최대 163mm까지 벌릴 수 있습니다. 스마트폰의 길이가 163mm를 초과하는 폰을 장착하기 위해서 손잡이를無理하게 벌리지 마십시오.

제품 사용 시 주의 및 권장사항

1. 제품 보증기간은 구매 후 1년까지입니다.
2. 포장과 내용이 다를 경우 교체를 위해 대리점에 문의하시기 바랍니다.
3. 강한 충격은 피해 주십시오.
4. 제품의 성능 향상을 위해 제품의 외관, 사양 등이 사전예고 없이 변경될 수 있습니다.
5. 임의로 분해, 개조한 제품에 대해서는 무상 A/S를 지원하지 않습니다.
6. 사운드와 연동하여 사용하는 제품이므로 진동 시 제품에서 소리가 나며, 볼륨 크기로 진동 세기를 조절할 수 있습니다. *본 제품은 볼륨 70%~90% 상태에서의 사용을 권장 드립니다.
7. 장시간 사용 할 경우 손목에 무리가 올 수 있으니, 충분한 휴식 후 재사용 하십시오.
8. 게임 플레이시 배경음을 소거한 후 본 제품을 사용하시면 집중으로 인한 방해 없이 원활한 플레이가 가능합니다.
9. 헤드폰(이어폰)과 함께 제품을 사용하시면 입체적인 몰입감을 느낄 수 있습니다.

햅틱콘솔을 최고의 컨디션으로 즐기는 방법

1. 본 제품은 스마트폰의 볼륨 조절을 통하여 진동의 강/약을 조절할 수 있습니다.
 - ▶ 볼륨을 70~90%로 설정하면 최적의 햅틱 진동을 느낄 수 있습니다.
2. 현실감있는 몰입을 즐기기 위해 이어폰 착용을 적극 권장합니다.
3. 게임을 플레이 할때, 옵션에서 배경음악을 소거한 후 플레이 하면 나의 타격감과 적의 소리 등을 느끼는 데 더욱 도움이 됩니다.

무선 이어폰, 헤드셋 사용시 듀얼 오디오 설정 방법 (삼성 갤럭시 스마트폰 안드로이드 버전 10, 블루투스 5.0 이상)



① 무선 이어폰, JH47-BT를 스마트폰 블루투스로 연결 시킵니다.

② 스마트폰 상단메뉴 에서 미디어 메뉴를 선택해 설정으로 들어갑니다.



③ 미디어 메뉴에서 기기 우측 오디오 체크 후 양 쪽 기기에서 음량을 따로 조절할 수 있습니다.

④ 진동을 키우고 소리를 줄이려면 사진과 같이 BB JH47-BT모델의 음량을 키우고 블루투스 이어폰의 음량을 낮춥니다.




⑤ 소리를 키우고 진동을 줄이려면 사진과 같이 BB JH47-BT모델의 음량을 낮추고 블루투스 이어폰의 음량을 높입니다.

Function

- A. Power ON (Press the button for 1.5 seconds or more)
OFF (for 4 seconds or more)
Battery Check (Pushing the key less than 1.5seconds)
- B. Battery Charger Connector (USD C Type)
- C. Earphone connector
- D. Battery Display LED

- E. Activating operation mode switch
In 2 seconds, Press the button :
Mode Change as Vibration, Vibration + Sounds)
- F. Type Description
- G. Display LED

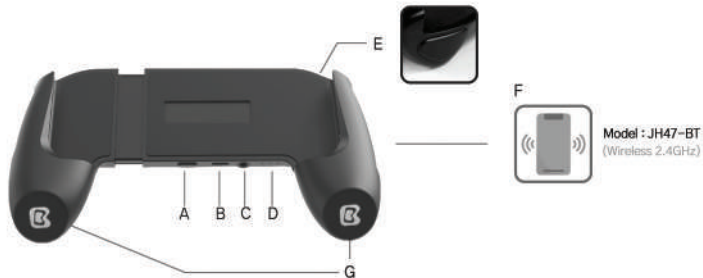

In the Box

Haptic Console 1ea / Haptic Console Case 1ea / User Manual 1ea/ Charger Cable 1ea

Warranty Policy and Precautions

We provide a one-year warranty from the date of purchase for all Sensefeel products.

External causes of malfunction and misuse or abuse of the Products can not be covered with the warranty.

Identified term

Product Name: Haptic Console / **Model :** Indicated separately / **Material :** PC/ABS and Electronic Components

Seller : Sensefeel / **Certification Number :** Indicated on products

Specification

Power: DC 5V / **Current Consumption:** Operation Max 400mA / **Battery :** Max 600mA / **Weight :** 160g (Main Body)

Charging Time : About 6 hours for full charging (up to 4hours usage) / **Function:** Haptic Function ON/OFF Setting button / Built-in Battery

How to assemble and disassemble the device to(from) Smart phone

Turn on the product, select BB JH47-BT of Bluetooth from the list of smartphone devices, then establish a Bluetooth connection. Then, attach the smartphone by pulling one side of the JH47-BT. The JH47-BT can be extended to 6.42 inches. When mounting a cell phone that exceeds 6.42 inches in length, do not forcefully open the handle.

Precautions and Recommendation

1. One-year warranty from the date of purchase.
2. If content may differ from the package, please contact the seller for the replacement.
3. Do not drop or cause an impact on the device.
4. Appearances and specifications are subject to change without prior notice.
5. External causes of malfunction and misuse or abuse of the Product can not be covered with the warranty.
6. As the device is operated by the sounds, the device makes sounds when vibrated.

Vibration intensity can be controlled by the volume key. *We recommend that the device is being used with 70 ~ 90% of the volume

7. As the long time usage may cause damage to your wrist, please pause and re-use the device after enough rest.
8. While you're playing the game with the device after muting the background sound, you can enjoy the game without a noise.
9. Headphone (Earphone) can make you absorbed in the game.

How to enjoy the Haptic Console with the best conditions

1. The vibration intensity of the device can be controlled by the volume key.
 - ▶ You can feel the best haptic feedback with 70 ~90% of the volume.
2. For your absorption, using an earphone is highly recommended.
3. Mute the background sound during playing the game, so that you can feel better your own batting sense and the sound of the enemy.

How to set up dual audio when using wireless earphones or headsets (Samsung Galaxy smartphone Android 10, Bluetooth 5.0 or higher)



① Connect the wireless earphone and JH47-BT to Bluetooth of smartphone.

② Enter the settings by selecting the media menu from the top menu of your smartphone.



③ After selecting Audio to the right of the device in the media menu, you can adjust the volume for both devices individually.

④ To increase the vibration and reduce the sound, increase the volume of the BB JH47-BT model and decrease the volume of the wireless earphone as shown in the picture.



⑤ To increase the sound and reduce vibration, decrease the volume of the BB JH47-BT model as shown in the photo.
Increase the volume of the wireless earphone.



www.sensefeel.com
(Korea Version)

www.bbhaptic.com
(English Version)